

# Colenta WideTrack

Automatic Processing of RA4 RC Paper / Display Film  
up to 140cm/55inch and 200cm/80inch processing width



## Colenta New Generation 140 and 200 RA Widetrack

- Available in production speeds of 80, 95 and 125 cm per minute
- Available in 4 and 5 Tank Options
- Available in Conventional Wash and Washless SST Format (SST - Super Stabiliser)



### New style and new features:

- # Multiple Channel programming
- # Outside filter housings for easy access
- # Level Control with auto fill
- # Systems manager with audio alert
- # Work in progress display
- # Max energy saving of water/power
- # Filter Control
- # Collection module with inbuilt motorised roll take-up device.

# incl. light tight feed box

### Standard Features and accessories:

- # Precision Replenishment
- # Equalised Power agitation
- # Oxidation control - tank and repl. solution
- # Modular Design - ease of installation
- # Integrated Long Roll Feed and Take-Up


### Optional Features and accessories:

- # Windows monitor software (RS232)
- # external chiller system
- # floor trough




Microprocessor controlled Display

## TRANSPORT SYSTEM:

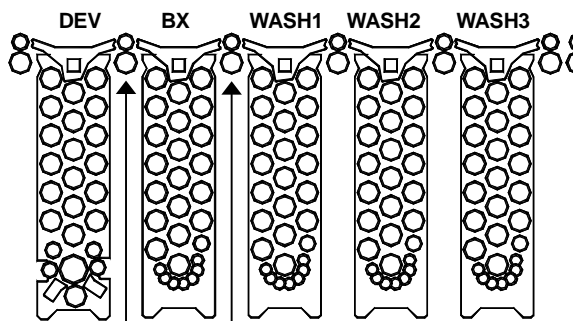

Rinsed cross over rollers

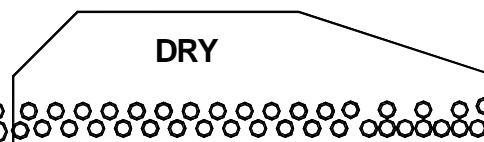

DRY



shown: 140 RA 5Tank WASH

Transport modules are fully submersed under liquid level, this feature eliminates potential problems relating to crystallisation and chemical oxidation. Water rinse cross-overs reduce chemical carryover, provide a safe transfer between tanks and ensure a consistently clean production quality

# Colenta®

See additional technical Data sheet and  
[www.colenta.at](http://www.colenta.at)

Technical specification subject  
to change without notice.

COLENTALABORTECHNIK  
Ges.m.b.H. & Co. KG  
Neunkirchner Strasse 117  
A-2700 Wiener Neustadt  
Tel.: +43-2622-28311-0  
Fax: +43-2622-28311-7  
E-mail: [office@colenta.at](mailto:office@colenta.at)  
WEB: [www.colenta.at](http://www.colenta.at)

ACI-COLENTA  
INTERNATIONAL Div.  
Forge Close, Little End Rd,  
Eaton Socon, Cambs. UK  
Tel. +44-1480-211118  
Fax: +44-1480-215236  
Fax: +44/870/1321352  
E-mail: [aci@patflaherty.com](mailto:aci@patflaherty.com)