

Colenta WideTrack

Automatic Processing of RA4 RC Paper / Display Film
up to 140cm/55inch and 200cm/80inch processing width



Colenta New Generation 140 and 200 RA Widetrack

- Available in production speeds of 80, 95 and 125 cm per minute
- Available in 4 and 5 Tank Options
- Available in Conventional Wash and Washless SST Format (SST - Super Stabiliser)



New style and new features:

- # Multiple Channel programming
- # Outside filter housings for easy access
- # Level Control with auto fill
- # Systems manager with audio alert
- # Work in progress display
- # Max energy saving of water/power
- # Filter Control
- # Collection module with inbuilt motorised roll take-up device.

incl. light tight feed box

Standard Features and accessories:

- # Precision Replenishment
- # Equalised Power agitation
- # Oxidation control - tank and repl. solution
- # Modular Design - ease of installation
- # Integrated Long Roll Feed and Take-Up


Optional Features and accessories:

- # Windows monitor software (RS232)
- # external chiller system
- # floor trough




Microprocessor controlled Display

TRANSPORT SYSTEM:

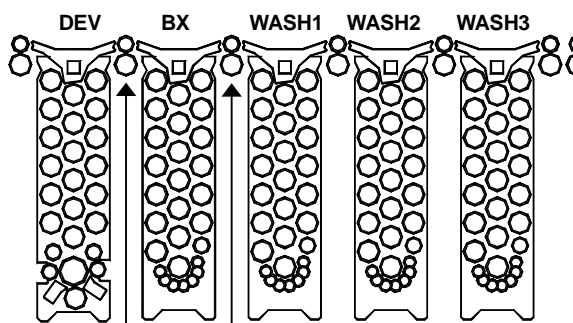

Rinsed cross over rollers

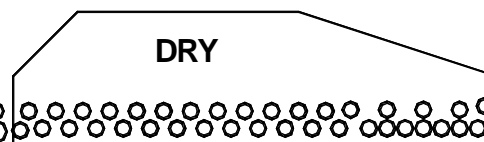

DRY

shown: 140 RA 5Tank WASH

Transport modules are fully submersed under liquid level, this feature eliminates potential problems relating to crystallisation and chemical oxidation. Water rinse cross-overs reduce chemical carryover, provide a safe transfer between tanks and ensure a consistently clean production quality

Colenta®

See additional technical Data sheet and
www.colenta.at

Technical specification subject
to change without notice.

COLENTALABORTECHNIK
Ges.m.b.H. & Co. KG
Neunkirchner Strasse 117
A-2700 Wiener Neustadt
Tel.: +43-2622-28311-0
Fax: +43-2622-28311-7
E-mail: office@colenta.at
WEB: www.colenta.at

ACI-COLENTA
INTERNATIONAL Div.
Forge Close, Little End Rd,
Eaton Socon, Cambs. UK
Tel. +44-1480-211118
Fax: +44-1480-215236
Fax: +44/870/1321352
E-mail: aci@patflaherty.com