

Colenta Imageline®

IMAGELINE Film Processor 140 SE Offline
Available in both Offline and Online options
for a wide range of Imagestters

for Graphic Art Films or PE-Printing Plates (up to 0,3 mm)
Imageline SE -Typ: 125 cm/min at 20 sec dev time




Standard Features and accessories:

- Low Level monitoring of all Tank solutions.
- Automatic Solution Tank „Top-Up“ control on „Start-Up“
- „Work in Progress“ monitoring
- Rep storage tanks
- Split processor frame for easy „bring in“
- prepared to connect the processor to an external exhaust air system


With 2 wash tanks for cascade media wash, with 9 preprogrammable processing cycles, intermediate rinse bath rack system, integrated covered stand and daylight feed box, with 2 x 30 ltr. replenisher tanks on pull out tray, incl. level control for replenisher tanks, with indication/alarm on controller display.

TRANSPORTSYSTEM:

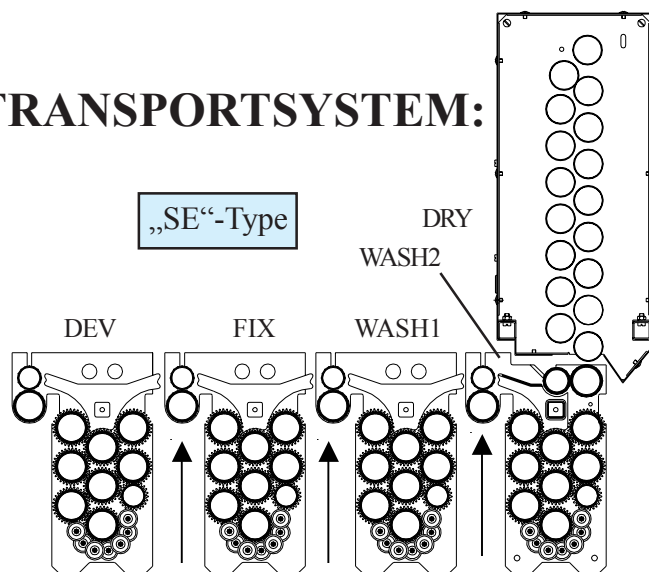


Rinsed cross over roller

Rack Carrier Tray/
Drip Tray for easy
handling the transpo
racks

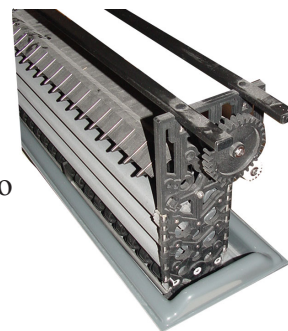

Pull-out tray for easy handling the
replenishment containers.

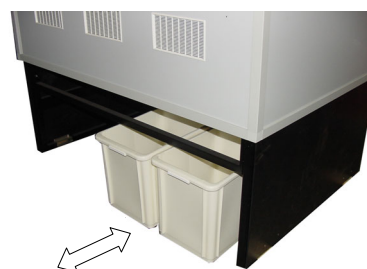

The Colenta Imageline 140 SE Film Processor is equipped with a 2 stage counterflow Washing facility that ensures clean film production with low water usage.



Microprocessor controlled Display

Colenta® see additional
Data sheet:
G2-2

Technical specification subject
to change without notice.

COLENTA LABORTECHNIK
Ges.m.b.H. & Co. KG
Neunkirchner Strasse 117
A-2700 Wiener Neustadt
Tel.: +43-2622-28311-0
Fax: +43-2622-28311-7
E-mail: office@colenta.at
<http://www.colenta.at>

ACI-COLENTA
INTERNATIONAL Div.
Forge Close, Little End Rd,
Eaton Socon, Cambs. UK
Tel. +44-1480-211118
Fax: +44-1480-215236
Fax: +44/870/132 1352
E-mail: aci@patflaherty.com