

# Colenta Imageline®

## IMAGELINE Film Processor 140 SE ONLINE for BARCO MEGASSETTER PLUS

for Graphic Art Films or PE-Printing Plates (up to 0,3 mm)  
Imageline SE -Typ: 125 cm/min at 20 sec dev time




### Standard Features and accessories:


- Low Level monitoring of all Tank solutions.
- Automatic Solution Tank „Top-Up“ control on „Start-Up“
- „Work in Progress“ monitoring
- Rep storage tanks
- Split processor frame for easy „bring in“
- prepared to connect the processor to an external exhaust air system
- online interface for BARCO Megasetter+

With 2 wash tanks for cascade media wash, with 9 preprogrammable processing cycles, intermediate rinse bath rack system, integrated covered stand and daylight feed box, with 2 x 30 ltr. replenisher tanks on pull out tray, incl. level control for replenisher tanks, with indication/alarm on controller display.

### TRANSPORTSYSTEM:

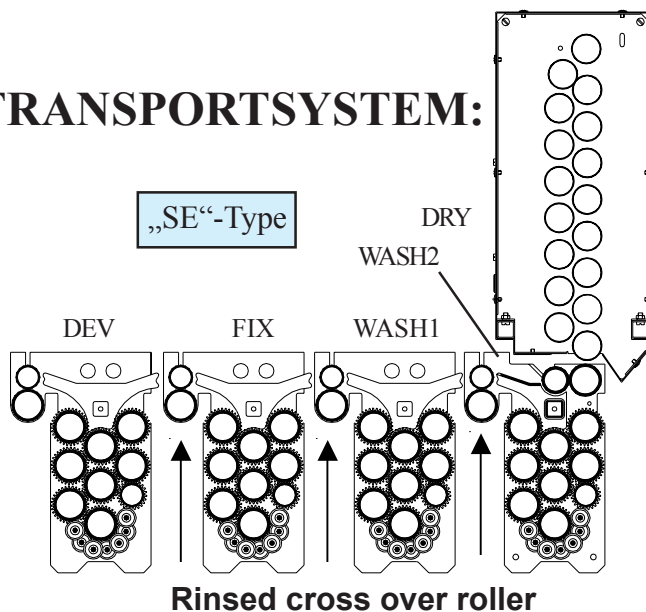


Rack Carrier Tray/  
Drip Tray for easy  
handling the transpo  
racks

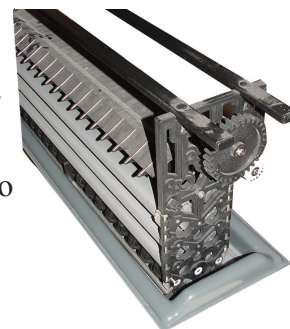

Pull-out tray for easy handling the  
replenishment containers.



The Colenta Imageline 140 SE Film Processor is equipped with a 2 stage counterflow Washing facility that ensures clean film production with low water usage.

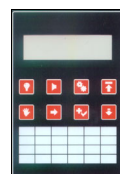

Microprocessor controlled Display

**Colenta**® see additional  
Data sheet:  
G2-17

Technical specification subject  
to change without notice.

COLENTA LABORTECHNIK  
Ges.m.b.H. & Co. KG  
Neunkirchner Strasse 117  
A-2700 Wiener Neustadt  
Tel.: +43-2622-28311-0  
Fax: +43-2622-28311-7  
E-mail: [office@colenta.at](mailto:office@colenta.at)  
<http://www.colenta.at>

ACI-COLENTA  
INTERNATIONAL Div.  
Forge Close, Little End Rd,  
Eaton Socon, Cambs. UK  
Tel. +44-1480-211118  
Fax: +44-1480-215236  
Fax: +44/870/132 1352  
E-mail: [aci@patflaherty.com](mailto:aci@patflaherty.com)