


Colenta® Easy Clean Product Range

For use with Roller Transport Processors

The Colenta Easy Clean range of products are designed for use with all models of Colenta Film and Paper Developers.

Regardless of the model of Processor in use, regular cleaning of the transport racks and tanks is recommended to maintain the high level of production quality, control algae growth and remove the bi-products from the media being developed.

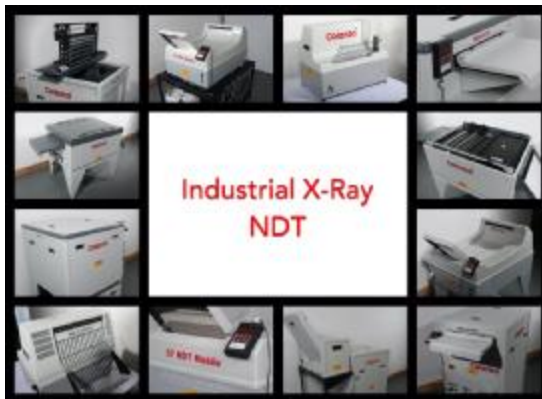

To make this cleaning easier, the **Colenta EASY CLEAN** products control the growth of Algae either by manual or the auto dosing of biocide into the washing tanks and provide a very effective developer cleaning agent to remove tar and silver from the developer tank and transport rack.

Cleaning Sheets are available to be used before daily production or after periods of inactivity to remove any residual deposits on the transport rollers.

Colenta®

02/2025 AN

COLENTA LABORTECHNIK, Ges.m.b.H. & Co. KG
Neunkirchner Strasse 117, A-2700 Wiener Neustadt
Tel.: +43-2622-28311-0, Fax: +43-2622-28311-7
E-mail: office@colenta.at, Web: www.colenta.at



Colenta® Easy Clean Product Range

For use with Roller Transport Processors

The Colenta Easy Clean range of products are designed for use with all models of Colenta Film and Paper Developers.



for Photo Paper
Color & BW



for PCB Film



for Photo Film
C41, B/W & E6



for NDT Film

Colenta Cleaning Sheets

35 x 43cm sheets to place into a processor after periods of non-activity or on daily start up before normal production is run.

90 50 100 Colenta EASY CLEAN Cleaning Sheet
1 box contains 50 sheets



Colenta Easy Clean Algae MD

This is a cleaning agent that prevents Algae Bio-Slime built up in the wash tank and on wash rack. To be **manually** dosed into the wash tank of the processor on a daily base.

90 50 501 Colenta EASY CLEAN
Anti-Algae MD 1box contains 10x1 litre bottles



Colenta Easy Clean Algae AD

This is a concentrated wash tank additive to prevent algae growth in the wash tank and wash rack, formulated for use with the Colenta automatic dosing pump system to add small quantities of additive into the wash tank at selective cycles and at the required amount during a 24 hour cycle.

90 50 502 Colenta EASY CLEAN
Anti-Algae AD 1box contains 4x5 litre containers



Colenta®

02/2025 AN

COLENTA LABORTECHNIK, Ges.m.b.H. & Co. KG
Neunkirchner Strasse 117, A-2700 Wiener Neustadt
Tel.: +43-2622-28311-0, Fax: +43-2622-28311-7
E-mail: office@colenta.at, Web: www.colenta.at



Colenta® Easy Clean Product Range

For use with Roller Transport Processors

The Colenta Easy Clean range of products are designed for use with all models of Colenta Film and Paper Developers.



for Photo Paper
Color & BW



for PCB Film



for Photo Film
C41, B/W & E6



for NDT Film

Colenta Easy Clean Dosing Pump

A simple to use dosing pump system to inject the Easy Clean Algae AD solution directly into the processor water supply at programmed times and at the required dosing rate.


90 50 555 Colenta EASY CLEAN Anti-Algae Dosing Pump assy



Its good practice to combine the **Colenta Water supply panel** with the **Colenta Dosing Pump** to provide an efficient all in 1 system to visually monitor the water supply line into the processor with the dosed supply of Anti Algae chemical.



Colenta®
Water Supply Panel assy
(see extra documentation)

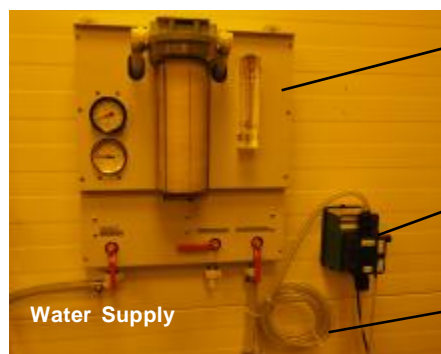

Water
Supply Panel

Dosing
Pump

Water Supply

Water supply &
Anti Algae supply
to processor

Colenta®

02/2025 AN

COLENTA LABORTECHNIK, Ges.m.b.H. & Co. KG
Neunkirchner Strasse 117, A-2700 Wiener Neustadt
Tel.: +43-2622-28311-0, Fax: +43-2622-28311-7
E-mail: office@colenta.at, Web: www.colenta.at

