

data sheet

Colenta[®]

AERIAL FILM Processor 30 C41 65



Colenta[®]

C41 Processor options for sheet and roll film
up to 30cm in width

09/2004 AN



C41 AERIAL Film Processor

TYPE: COLENTA AERIAL 30 C41 65

Technical Specifications:

Processing applications: C41 Negative film

Max. Process width: max. 30 cm - 12 inch (4 Track loading of 35mm film)

Microprocessor Control: with 6 preprogrammable processing cycles

Transport Speed: AERIAL 30 C41 65 - 65cm/ 26 inch per minute (at 3min 15sec Dev.Time)

(Dev. times are pre-programmable for push-pull processing)

***Tank capacities:* AERIAL 30 C41 65**

Developer	:	34,0
Bleach	:	44,0
Wash	:	18,0
Fix	:	44,0
Wash	:	18,0
STAB	:	10,0

Replenishment: - Precisely controlled using opto-sensors to measure the film area loading.
- Activated after a pre-programmed film area is fed into the processor
- Antioxidation/standby replenishment, activated after 0-9 hours *

Solution Levels: Low Level monitoring in all tanks *
High Level monitoring in Overflow Collection Tanks (waste management, optional) *
Low Level in Repl. Tanks for Dev-, Bleach, Fix and Stabi (optional) *

Temperatures: High / Low level monitoring for all the wet-tanks

Work in Progress : Details the location of film within the processor.

Transport: Drive motor overload monitoring
Security cover lid switch


(* optional) - when activated will operate an audible warning and a message alert to confirm the error type.

Technical specification subject to change without notice.

Transport System:




COLENTA AERIAL 30 C41 65

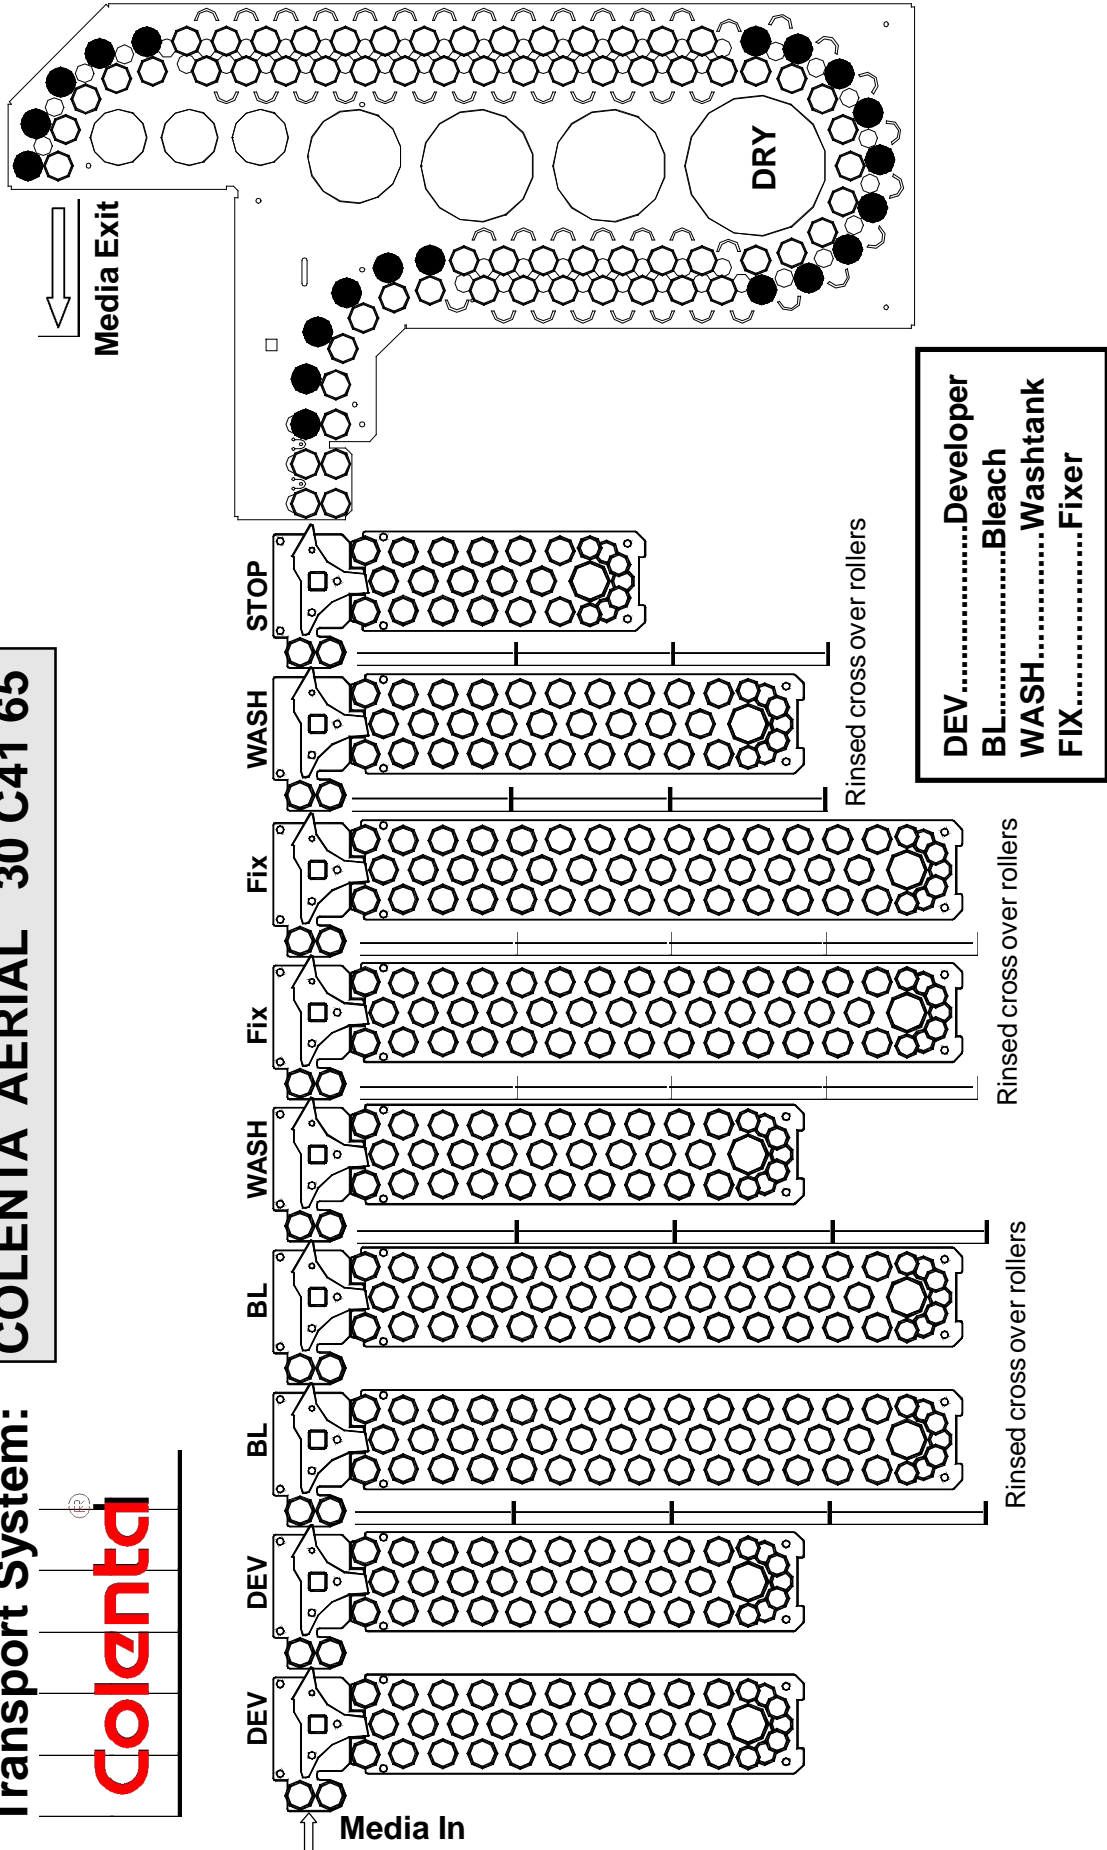

DIMENSIONS for:

COLENTA AERIAL 30 C41 65

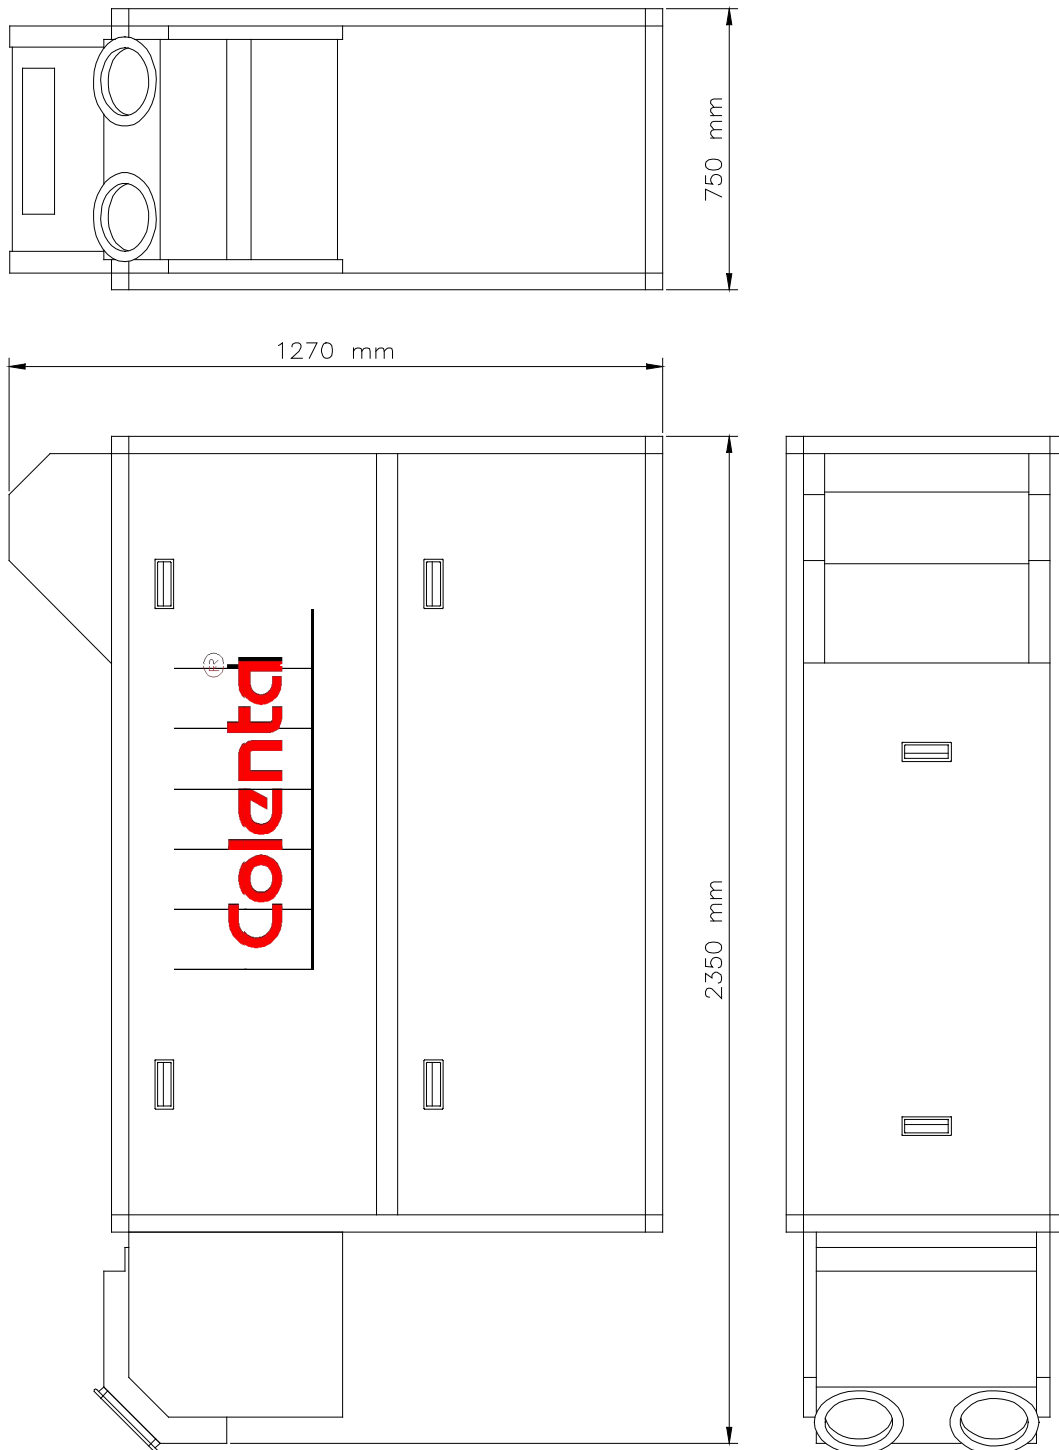


We recommend a minimum walking space of 60cm around the processor.

Electrical supply: (Standard, when 3N~400/230V, 50/60 Hz supply available)

AERIAL 30 C41 65

**7,6 kW
25 A**

Colenta[®]

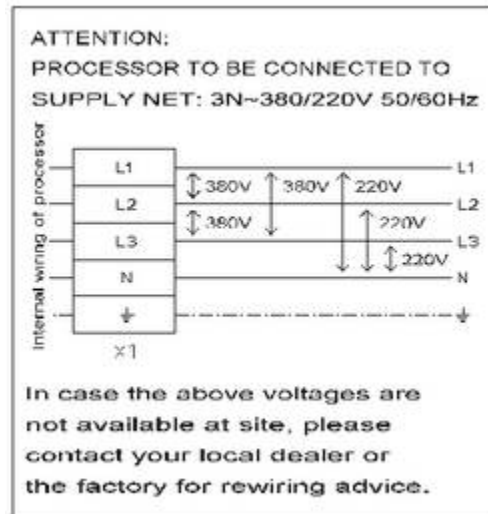

Alternatives, to be indicated when ordering

Details for shipment:

AERIAL 30 C41 65

packing dimensions: 1 wooden box on palette
243cm x 93cm x 150cm (L x W x H)
packing volume: 3,39 m³
weight with packing: 566 kg