

Colenta[®] Imageline Plate[®]

For Photopolymer CTP Printing Plates
IMAGELINE PLATE - TYPE ILP 68-85 FP/OL
Online for Lithotech



The Colenta FP Processors incorporates all the experience and features of Colenta's now well proven Plate Developing and handling technology to produce Photopolymer CtP printing plates (with or without PreHeat) to the highest standards.

Some details of the features of the COLENTA PlateProcessor design:

- * A Robust design with ease of operation.
- * A sophisticated Control software monitors and manages the varying range of production conditions in respect to replenishment requirements (including standby and sleepmode replenishment) ensuring a stable plate developer and consistent good quality production.

ILP68 for: L540M/L540A
 ILP85 for: L750M/L750A/
 L1100M/L1100A



Standard Features and Accessories:


- Low Level monitoring for the DEV-tank
- Automatic Solution Tank „Top-Up“ control on „Start-Up“
- High level monitoring for DEVELOPER overflow collection tank
- Low Level monitoring for DEVELOPER replenishment tank
- Re-Wash Feed Facility - „Safe Loading“ control
- integrated Chiller unit - „Work in Progress“ monitoring
- Sleep Mode for overnight and weekends
- Automatic cleaning cycle for the gum section before entering the sleepmode
- possibility to deactivate the PreHeat to run non-PreHeat plates

Optional:

- processor control software (Windows)
- floor trough
- different color design



A drawer unit within the main frame to house the replenishment and waste collection tanks. (waste management)

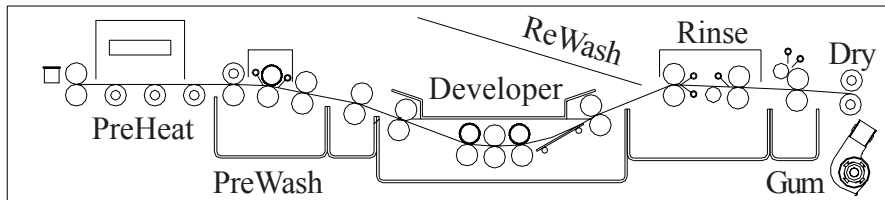

Technical Specifications:

Processing applications: Photopolymer Printing Plates
Plate width: max. 68 / 85 cm
Microprocessor Control: With 4 preprogrammable processing cycles and 1 overnight program (SLEEPMODE)
Transport Speed at 23 sec DEV-Time: 125cm/min - 49 inch/min

	Tankcapacity ILP 68 FP	Tankcapacity ILP 85 FP
PreWash :	Open system	Open system
Developer :	40 lt	48 lt
Wash :	Open system	Open system
Gum :	Closed system	Closed system

Electrical supply:	7,0 KW	8,1 KW
at 3N-400/230V	13 A	16 A
(alternatives are available on request)		

Weight:	Empty	350 kg	385 kg
	With solution	390 kg	425 kg

PRE-HEAT SWITCH



3 free programmable settings for 0.15 / 0.20 / and 0.30 Plates



Microprocessor controlled Display



Technical specification subject to change without notice.

see additional Data sheet: G4-35 G4-36

COLENTA LABORTECHNIK
 Ges.m.b.H. & Co. KG
 Neunkirchner Strasse 117
 A-2700 Wiener Neustadt
 Tel.: +43-2622-28311-0
 Fax: +43-2622-28311-7
 E-mail: office@colenta.at

ACI-COLENTA
 INTERNATIONAL Div.
 Forge Close, Little End Rd,
 Eaton Socon, Cambs. UK
 Tel. +44-1480-211118
 Fax:+44-1480-215236
 Fax: +44/870/132 1352
 E-mail: aci@patflaherty.com