



Colenta[®] Semi Automatic Mixing Console 2x40

The new Colenta Mixing Console MC 2x40 incorporates a „3 in 1“ system. To be used for:

- mixing the chemicals (concentrate and water)
- storing the replenishment
- transferring the chemicals into the processor tanks

A simple and clean solution for chemical mixing and replenishment storage.



Standard Features :

- Compact / robust design
- Double tank design Dev & Fix
- Ease of operation & maintenance
- 2 separate pumps Dev & Fix
- Inbuilt level control
- CE declaration

Standard accessories:

- Anti oxidation cover for Dev
- Small user spare part kit


The unit supports a capacity of 2x40 litre in each tank, 2 floating switches for level control, filter cartridges and a litre scale in each tank.

The level control switches are to be connected either to directly to a Colenta processor (message via display) or to an external control device (optional accessories) providing an audible alarm in case of low level.



The MC 2x40 filling a PCB processor

Colenta[®] Semi Automatic MC 2x40

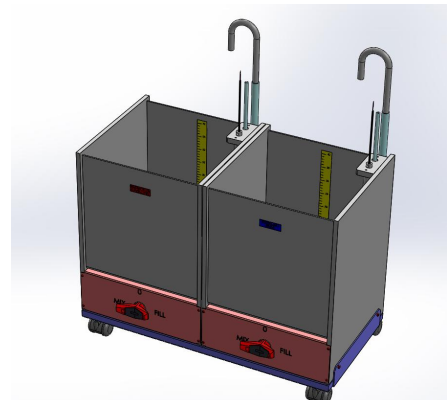

COLENTA LABORTECHNIK
Ges.m.b.H. & Co. KG
Neunkirchner Strasse 117
A-2700 Wiener Neustadt
Tel.: +43-2622-28311-0
Fax: +43-2622-28311-7
E-mail: office@colenta.at
<http://www.colenta.at>

ACI-COLENTA
INTERNATIONAL Div.
Forge Close, Little End Rd,
Eaton Socon, Cambs. UK
Tel. +44-1480-211118
Fax: +44-1480-215236
Fax: +44/870/132 1352
E-mail: aci@patflaherty.com