



Colenta[®] Semi Automatic Mixing Console 2x40 / 2x80

The new Colenta Mixing Console MC 2x40 (2x80) incorporates a „3 in 1“ system. To be used for:

- Mixing the chemicals (concentrate and water)
- Storing the replenishment
- Transferring the chemicals into the processor tanks

A simple and clean solution for chemical mixing and replenishment storage.



**Colenta[®]
MC 2x40**

**Colenta[®]
MC 2x80**

Standard Features :

- Compact / robust design
- Double tank design Dev & Fix
- Ease of operation & maintenance
- 2 separate pumps Dev & Fix
- In built level control
- CE declaration

Standard accessories:

- Anti oxidation cover for Dev
- Small user spare part kit

The unit supports a capacity of 2x40 (2x80) litre in each tank, 2 floating switches for level control, filter cartridges and a litre scale in each tank.

The level control switches are to be connected either directly to a Colenta processor (message via display) or to an external control device (optional accessory) providing an audible alarm in case of low level.



A Colenta MC2x40 supporting a
66 PCB Filmprocessor



A Colenta MC2x40 supporting a
StudioLine Paperprocessor

Colenta[®]

**COLENTALABORTECHNIK
Ges.m.b.H. & Co. KG
Neunkirchner Strasse 117
A-2700 Wiener Neustadt
Tel.: +43-2622-28311-0
Fax: +43-2622-28311-7
E-mail: office@colenta.at
<http://www.colenta.at>**



Colenta[®] Semi Automatic Mixing Console 2x40 / 2x80

Examples of MC2x40 in use:




A Colenta MC2x40 supporting a **66 PCB** Filmprocessor

A Colenta MC2x40 supporting a **StudioLine** Paperprocessor



Dimensions:

Colenta[®] Semi Automatic MC 2x40

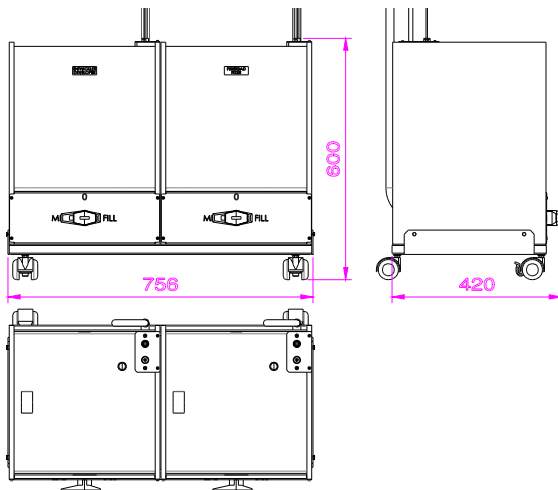

Colenta[®] Semi Automatic MC 2x80

